

# LOOP START TRUNK TO UTI312

For other configurations, consult the UTI312 Installation Manual starting on page 7

UTI312

