



Quantum

MULTICOM IP

Rack System Grille Installation Instructions

INSTALLATION INSTRUCTIONS

1. Unscrew and remove existing Multicom Rack Unit card cage cover.
Apply MC2K Logo Blocking Label (*see sidebar*).
2. Using screws from old cover, thread screws through BRACKETS as shown (*see Fig. 1*) and attach each to the front of Rack Unit Card Cage (*see Fig. 2*).
3. Position QUANTUM FRONT GRILLE over each newly fastened bracket and allow NOTCH on top of each bracket to be inserted into SLOTS on top of the grille (*see Fig. 3*).
4. Using attached THUMB SCREWS on face of grille, screw the Quantum Grille to the brackets (*see Fig. 4*).

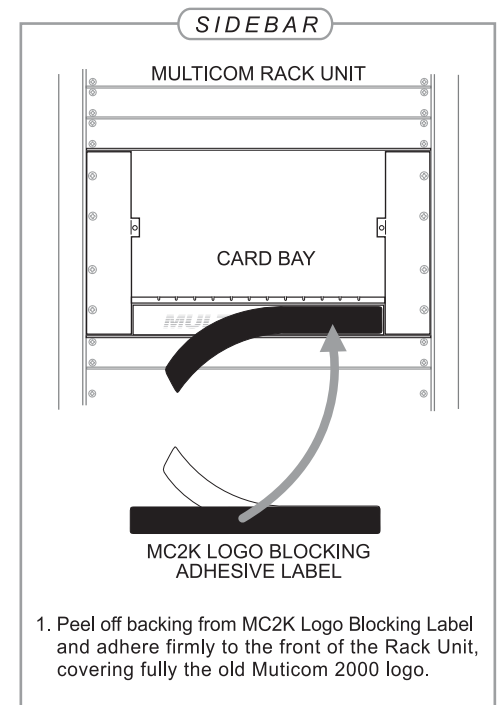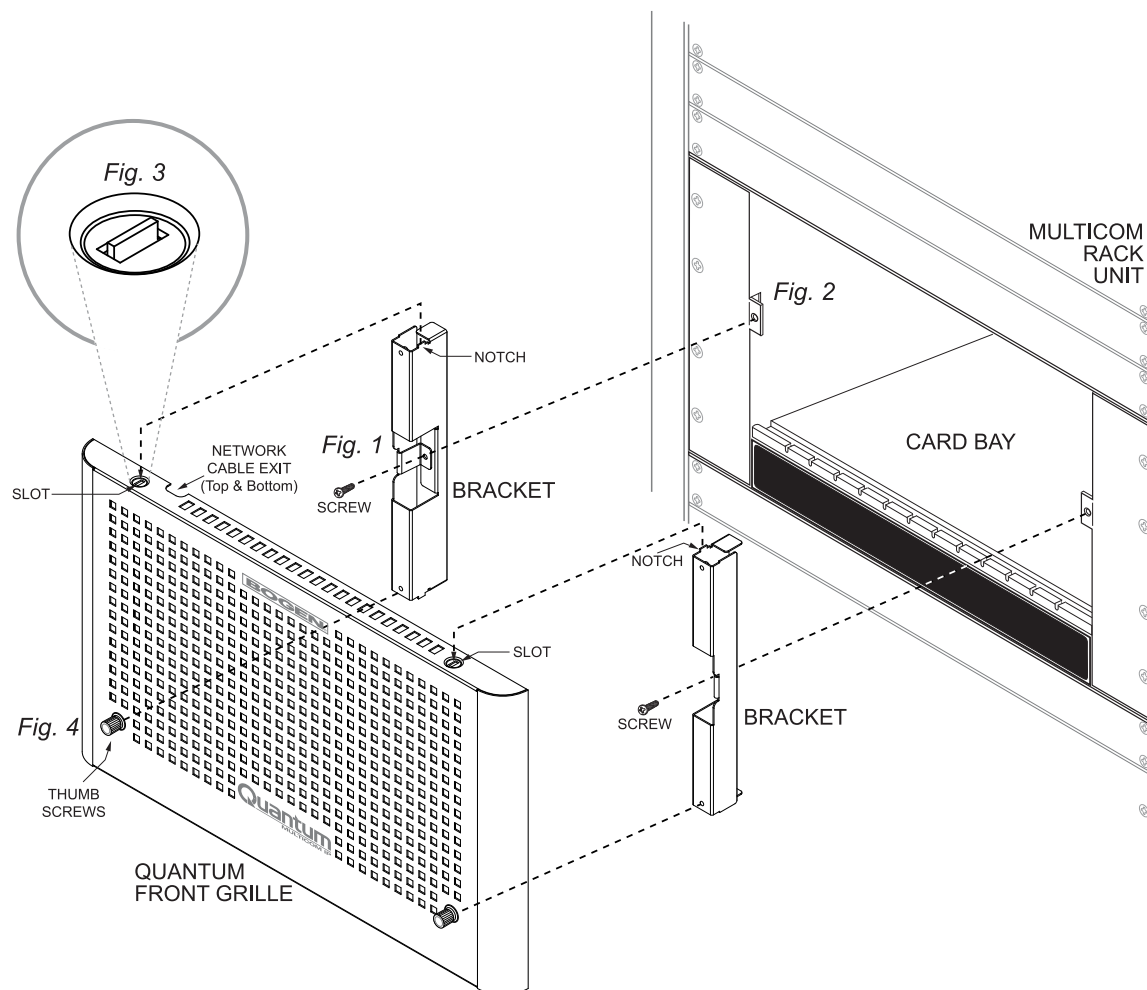

BOGEN

50 Spring Street, Ramsey, NJ 07446, U.S.A.
Tel. 201-934-8500 • Fax: 201-934-9832
www.bogen.com

© Specifications subject to change without notice.
© 2007 Bogen Communications, Inc.
Part No. 54-7893-01A Printed in U.S.A. 0704