



# **AMT-12 AMT-15**

## **Professional Loudspeakers**

## **Installation and Use Manual**

## Table of Contents

Introduction .....	2
Speaker Mounting .....	2
Powering the Loudspeaker .....	3
Input Panel .....	3
Daisy-Chaining Speakers .....	4
Speaker Block Diagram .....	4
Connector Wiring Diagram .....	4
Specifications .....	5
Limited Warranty .....	6

## Notice

Every effort was made to ensure that the information in this guide was complete and accurate at the time of printing. However, information is subject to change.

## Introduction



The **AMT-12** is designed to deliver high-output music and sound reinforcement in a lightweight package. The 12-inch woofer has high sensitivity to maximize amplifier output. The 1.77-inch compression driver diaphragm, comprised of an aluminum alloy for added strength and rigidity, effortlessly handles the high input levels to match the woofer. A carefully designed cross-over network accurately filters each driver for proper matching of phase and summation in the cross-over region. The transition is much smoother than other loudspeakers in this class, making the sound more accurate and more realistic.

The **AMT-15** combines the same high-output compression driver used in the AMT-12 with a robust 15-inch woofer. The sound quality is enhanced further by a richer, dynamic bass response which extends a full 10 Hz lower. The AMT-15 can fill larger rooms with more power than competitive models, and with much more accurate sound.

## Speaker Mounting

### Single Speaker

The Apogee AMT loudspeakers may be deployed individually by several methods. First, the loudspeakers may be stacked directly on one another using the built-in feet on each speaker.

Both the AMT-12 and AMT-15 may be mounted on stands using the integrated 35mm (1-3/8") stand mount on the bottom of the enclosure. Because of the light weight of the AMT loudspeakers, plus the convenient integral handle, one person can set up multiple speakers on stands easily and quickly.

The loudspeakers may also be suspended by attaching forged eye-bolts to the rigging points of the speakers (Rigging point: depth 15mm, diameter M8, thread pitch 1.25mm). There are two rigging points located on the speakers' top and two on the bottom. Plastic screw caps protect the rigging points. The enclosures can be suspended from these points with stainless steel wire rope or an equivalent approved by a qualified engineer and/or your local code enforcement office.



**Note:** The rigging points are only for suspending the speaker itself. Do not suspend other equipment from the speaker's rigging points.

### Multiple Speakers

The Apogee AMT loudspeakers have a coverage angle of 60 degrees horizontally by 45 degrees vertically. Should this not be sufficient to properly cover the listening area, or if the acoustic output of a single speaker is not great enough, multiple AMT loudspeakers may be arrayed to provide greater coverage or higher on-axis SPL. The preferred method of arraying two loudspeakers is with the Apogee Adjustable Rigging Beam Assembly (Part No. 109-2140). The rigging beams allow for user adjustment of the splay angle between the cabinets from 0 degrees "Tight Pack" to 30 degrees of splay.

In a Tight Pack Array, the total coverage of the array will be slightly greater than that of a single speaker. Because of the overlap in coverage between the speakers in the Tight Pack configuration, the on-axis SPL will increase 3dB. As the splay angle increases, the on-axis SPL will slowly decrease back to that of a single speaker and the coverage angle will widen to a maximum of 120 degrees horizontal.

## Powering the Loudspeaker

### Amplifier Selection

It is important that the appropriate amplifier be used for a specific loudspeaker to avoid accidental driver damage. Underpowered amplifiers will clip easily, sending a highly distorted signal to the speaker. This distorted signal has a far greater density of energy than normal program and will “burn out” drivers quickly.



**Note:** Be certain that the total impedance of all interconnected speakers is not lower than the amplifier’s minimum rated impedance. The AMT-12 and AMT-15 are 8-ohm speakers.

### Wire Selection

Good quality speaker cable of the appropriate gauge is a worthwhile investment. Not all of the power generated by your amplifier is delivered to your loudspeakers. Some power is lost as heat in the speaker cable. While this heat is rarely enough to be a fire hazard, it can reduce a significant amount of amplifier power delivered to the loudspeakers. In addition to loudspeakers not reaching their full potential loudness, undersized wire will also decrease the woofers’ ability to respond accurately to transients, leaving the bass response loose and inarticulate.


The appropriate wire size depends on the distance between the amplifier and the speaker and the final combined impedance of the speaker or speakers at the end of the cable run. Here is a list of recommended wire gauges:

Distance from Amp to AMT Speaker	8 Ohms (1 Speaker)	4 Ohms (2 Speakers)
50 Feet	16 AWG	16 AWG
100 Feet	14 AWG	12 AWG
200 Feet	12 AWG	10 AWG
400 Feet	10 AWG	8 AWG


### Input Panel

The AMT-12 and AMT-15 use Speakon-type connectors. Each AMT speaker has two parallel connectors, one can be used for the input and the other for a loop-thru connection to another speaker if desired.

AMT-12 Panel

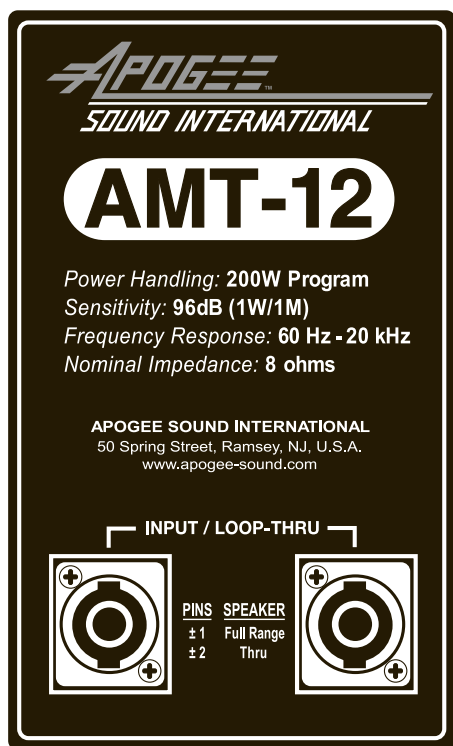

AMT-15 Panel

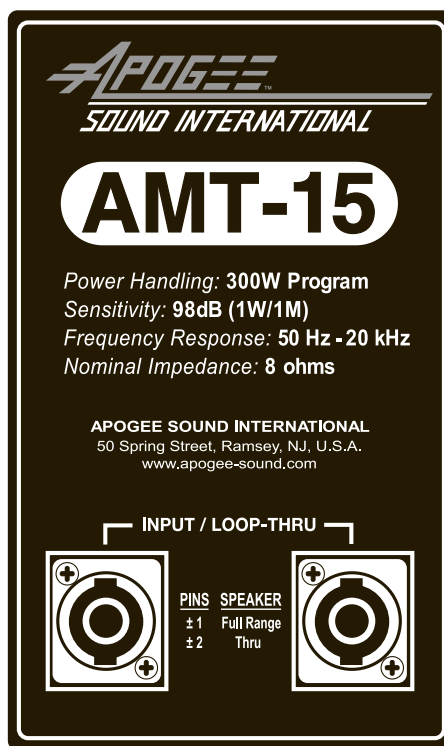


## Daisy-Chaining Speakers

In this example, pins 1+ and 1- on the Input (Left) connector receive full-range audio from the amplifier or from a previous speaker in a chain.

The Loop-Thru (Right) connector uses the 1+ and 1- pins to send full-range audio to the Input connector of another speaker in a chain.


Loop-Thru connects all speakers in the chain in parallel. Make sure the total impedance of the chain is not less than what the amplifier is rated to handle.

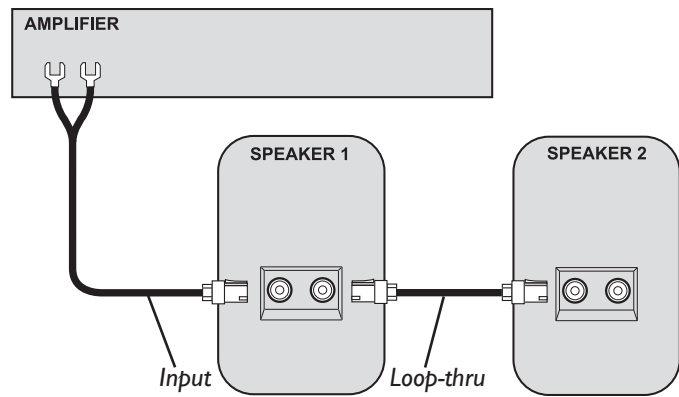

## Speaker Block Diagram

1±: Full-range audio


2±: Feed through only

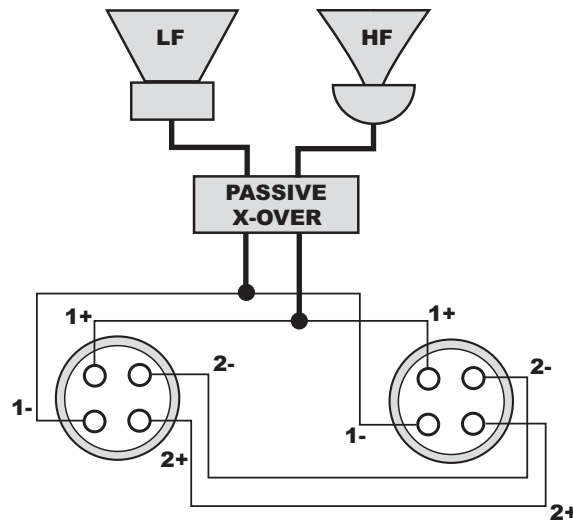

## Connector Wiring Diagram

View from terminal side

Wire like-named pins together to make loop-thru speaker cables.

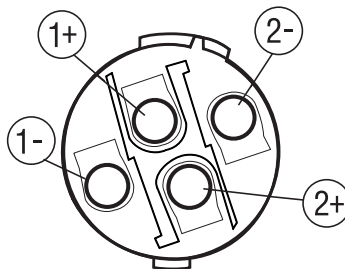

## AMT-Series Loudspeaker Specifications

SPECIFICATIONS	AMT-12
Frequency Response (-10 dB)*	60 Hz to 20 kHz
LF Driver	12" High-Sensitivity Design
HF Driver	1.77" Aluminum-Alloy Diaphragm Compression Driver
Sensitivity (1W/1M)	96 dBspl
Impedance Ratings	8 ohms Nominal
Power Input (Max.)	200W at 8 ohms (program)
Dispersion	60° H × 45° V
Enclosure Material	Mineral-filled Polypropylene
Grille Material	Perforated Steel
Terminations	Dual Speakon-type Connectors
Product Weight	37 lb.
Speaker Dimensions	23" H × 16.25" W × 13" D
Included Accessories	Stand-mount Clamping Screw
Optional Accessories	Adjustable Rigging Beam Assembly, Tripod Stand
Color	Black

\* Free Space Response

SPECIFICATIONS	AMT-15
Frequency Response (-10 dB)*	50 Hz to 20 kHz
LF Driver	15" High-Sensitivity Design
HF Driver	1.77" Aluminum-Alloy Diaphragm Compression Driver
Sensitivity (1W/1M)	98 dBspl
Impedance Ratings	8 ohms Nominal
Power Input (Max.)	300W at 8 ohms (program)
Dispersion	60° H × 45° V
Enclosure Material	Mineral-filled Polypropylene
Grille Material	Perforated Steel
Terminations	Dual Speakon-type Connectors
Product Weight	47 lb.
Speaker Dimensions	27" H × 19" W × 15" D
Included Accessories	Stand-mount Clamping Screw
Optional Accessories	Adjustable Rigging Beam Assembly, Tripod Stand
Color	Black

\* Free Space Response

## Limited Warranty; Exclusion of Certain Damages

Apogee Sound AMT-12 and AMT-15 Loudspeakers are warranted to be free from defects in material or workmanship for three (3) years from the date of sale to the original purchaser. Any part of the product covered by this warranty that, with normal installation and use, becomes defective will be repaired or replaced by Apogee, at our option, provided the product is shipped insured and prepaid to: Apogee Sound Factory Service Department, 50 Spring Street, Ramsey, NJ 07446, USA. The product will be returned to you freight prepaid. This warranty does not extend to any of our products that have been subjected to abuse, misuse, improper storage, neglect, accident, improper installation or have been modified or repaired or altered in any manner whatsoever, or where the serial number or date code has been removed or defaced.

**THE FOREGOING LIMITED WARRANTY IS APOGEE'S SOLE AND EXCLUSIVE WARRANTY AND THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY. APOGEE SOUND MAKES NO OTHER WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED AND EXCLUDED TO THE MAXIMUM EXTENT ALLOWABLE BY LAW.** Apogee's liability arising out of the manufacture, sale or supplying of products or their use or disposition, whether based upon warranty, contract, tort or otherwise, shall be limited to the price of the product. IN NO EVENT SHALL APOGEE BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS, LOSS OF DATA OR LOSS OF USE DAMAGES) ARISING OUT OF THE MANUFACTURE, SALE OR SUPPLYING OF PRODUCTS, EVEN IF APOGEE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSSES. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

Products that are out of warranty will also be repaired by the Apogee Sound Factory Service Department – same address as above or call 201-934-8500. The parts and labor involved in these repairs are warranted for 90 days when repaired by the Apogee Sound Factory Service Department. All shipping charges in addition to parts and labor charges will be at the owner's expense. All returns require a Return Authorization number.

7/22/2008

***APOGEE***  
***SOUND INTERNATIONAL***  
50 Spring Street, Ramsey, New Jersey 07446, USA  
201-934-8500 FAX: 201-934-9832  
[www.apogeesound.com](http://www.apogeesound.com)